

ADN-01/ADN-02/ESW01 Wireless Kit ADN-01/ADN-02/ESW01 无线套件



Hytera

is the trademark or registered trademark of Hytera Communications Corp., Ltd.

2014 Hytera Corp., Ltd. All Rights Reserved.

Address: HYT Tower, Hi-Tech Industrial Park North, Beihuan RD., Nanshan District, Shenzhen, China Postcode:518057 http://www.hytera.com

T07625 C10524 Z04313 8110000006900

致用户

非常感谢您对我们产品的青睐!为了确保您 最大限度地享用本产品所带来的各项便利, 请干使用前详细阅读本手册。

本手册适用以下产品: ADN-01无线适配器 ADN-02无线适配器

ESW01无线耳机 免责声明

本手册在编制过程中力求内容的准确性与完整性,但对于可能出现的错误或流漏。我司 不承担任何责任。由于技术的不断发展,我司 有保留不予通知而更改产品设计与规格的权 利。未经我司事先书面授权,不得以任何形式对本手册进行复制、修改、翻译和散发。 如简更多信息或对本手册者任何建议,欢迎 妨时的时站: http://www.hytera.com, 或拨打我司服各热线。400-830-7020.

注意事项

使用过程中,无线耳机与手持终端之间的

距离不能超过10米。

- 开车时使用耳机,请遵守所在国家或地区的规定。
- 请勿在雷暴天气下使用本产品,雷暴可能 导致本产品工作不正常。
- 长时间接触高音量噪音可能会暂时或永久 损伤听力,所以请尽量将音量调低,并避 免长时间佩戴耳机。

.

检查包装内物品

包装盒内含有以下物件。如有任何物件丢失 或损坏,请与我司或您所购产品的经销商联 系。

序号	名称	数量
1	无线耳机	1
2	耳挂	1
3	耳套	3
4	无线适配器	1
5	说明书	1


功能概述

本产品是一款轻薄小巧、佩戴舒适、低功耗的无线耳机,适用于Hytera的手持终端(主机版本不能低于5.05)。

本产品可让您实现免提和秘密的通话,并可在10米内自由移动。 无论手持终端是否支持无线功能,均可通过 本产品进行通话。


产品示意图

无线耳机

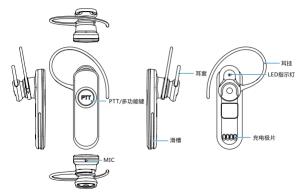

3

无线适配器

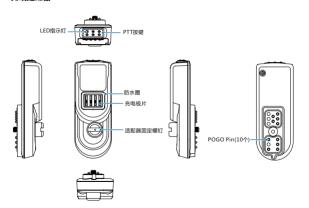

4

圳枚杂数

MIN 25 3K		
通话时间	>4小时	
防尘防水等级	IP54	
工作温度	无线耳机: -20℃~+60℃	
	无线适配器: -25°C~+65°C	
储存温度	无线耳机: -40 ℃~+75℃	
	无线适配器: -40°C~+75°C	

充电

- **2**
 - 本产品通过手持终端即可轻松充电,为 了不影响手持终端的使用时间,建议手 持终端选用我司的高容量电池。
 - 本产品充电时,手持终端可正常使用。长时间不使用本产品时,请保证三个月
 - 长时间不使用本产品时,请保证三个月 内充一次电。
 - 如果充电时,LED红灯不亮,可能是电量太低,充电10~20分钟才能亮灯。

使用前请先充电。充电过程中,无线耳机 LED红灯长亮,充满后,无线耳机LED蓝灯 长亮。同时,无线耳机的指示灯还显示无线 配对和连接状态,具体请参见"LED指示灯 状态"。

将无线适配器连接到手持终端上,并用适配器自带的螺钉固定。



 将无线耳机装入无线适配器上。 注意要推到底部。



3. 开启手持终端。

★ 注意:必须开启手持终端,才能对无线耳机 充电。如果手持终端自身充电的同时,又对 无线耳机进行充电,请确保已开启手持终 端。

配对与连接

闪烁红蓝灯。

无线耳机与适配器首次建立连接时,需要先 配对再连接,重新连接时,不需要配对而是 直接建立无线连接。

- 1. 关闭与本产品建立无线连接的其他设备。
- 将本产品连接到手持终端上(见充电中的方法)。
- 3. 开启手持终端,即可开启本产品。
- 4. 无线耳机与适配器自动进行配对和连接。● 配对:无线耳机/适配器LED指示灯交替
- 无线连接:建立连接后,LED指示灯蓝灯 快闪。

佩戴

贴士:本产品配有大小不同的三个耳套,请 选择您佩戴最舒适的耳套。

建立无线连接后,佩戴好无线耳机。注意调整耳套,让其贴入耳窝,并通过耳挂固定好 耳机。佩戴后,可尝试走动、摇头,检查是 否固定好。



发射

本产品可满足您灵活的发射需求。拾取无 线耳机后,按住无线耳机上的【PTT】键发 射:也可以按住适配器上的【PTT】键发 射。

开/关机

开关机过程中,无线耳机均有提示音(仅佩 戴后才能听到)。

开机

 自动开机:本产品连接到手持终端后,开 启手持终端时可以自动开启本产品。 手动开机:无线耳机未装入无线适配器 时,长按【PTT】键,可开启无线耳机。 无线适配器只能通过手持终端开机。

开机后,LED指示灯开始闪烁,您通过LED 指示灯了解无线的连接情况,具体请见 "LED指示灯"的介绍。

关机

如需关闭无线适配器,请关闭手持终端。 如需关闭无线耳机,请在断开无线连接时 (LED指示灯慢闪蓝灯)长按【PTT】键。 关机后、LED指示灯熄灭。

LED指示灯状态

企注

- 无线耳机连接到手持终端充电时,如 果电未充满,LED将有红灯,充满电后 LED将有蓝灯常亮,这样会影响您对 LED指示灯的识别。如果不确定LED指 示灯的状态,建议逐通过无线适配器的 LED状态来识别无线耳机状态,或取下 无线耳机,再进行闪灯的识别。
- 以下指示灯状态不包括充电状态。

指示灯状态	产品状态
红蓝灯交替闪烁	无线配对
红灯常亮	PTT发射
红灯闪烁	低电(仅适用于无线
	耳机)
蓝灯快闪(每次闪两	已建立无线连接, 但
下)	无语音
蓝灯快闪(每次闪一	已建立无线连接,且
下)	有语音
蓝灯慢闪	未建立无线连接

故障处理

故障描述	原因分析	解决方法
无线耳机充 电时,红灯 不亮	电池 电量 已彻 底用完	请充电10~ 20分钟,指 示灯将呈红 色。
无线耳机与 适配器长时 间无法配对	无线耳机或适 配器已经分 他无线设备配 对	设备后,重新

质量保证与维修条款

我司承诺,凡我司生产的产品,自购买之日 起,在正常使用、操作与维护条件下,出现 材料或制造工艺方面的缺陷,可享受以下规 定的保修服务。

保修的范围与期限

ADN-01无线适配器 6个月 ADN-02无线适配器 6个月 ESW01无线耳机 6个月



注意:请将产品包装好,附上详细的故障说明寄至原购点或我司指定的售后服务点。您也可以通过拨打我司的服务热线400-830-7020莽得帮助。

本服务保证条款不包括以下内容:

- 超出保修有效期限。
- 未按说明书要求使用、维护及保养所造成的故障或损坏。
- 在非正常和非常规情况下使用本产品所造成的故障或损坏。
- 未经我司授权的改造、改动、或未经我司授权的情况下对产品进行软件升级、固件 抵动等所造成的故障或损坏。
- 产品上的我司相关标志或序列号码标贴被 撕毀、序列号被抹除或无法辨认的产品。
- 购买日期无法鉴定的产品。
- 可抗力所造成的故障或损坏。
- 正常及常规磨损。

特别说明:

 法律允许的限度内,我司在任何情况下都 不对超过产品购买价格的损失承担责任。 同时不对任何使用损失、时间损失、商业 损失、利润或收入损失、不能使用产品而 导致的附带的、特殊的或继发性损坏承担 负责。

 本维修条款是根据国家相关保修条例所制定的,由于技术发展与市场调整等因素。 条款内容也将进行相应的修改。具体修改请以我司客户服务中心发布的维修条款变动通知为准。其他未尽事宣请以国家相关条例为准。

Preface

Thanks for your favor in our product. To derive optimum performance from the product, please read this manual carefully before use.

This manual is applicable to the following product:

AND-01 Wireless Audio Adapter (PD70X series)

AND-02 Wireless Audio Adapter (X1e series)
ESW01 Wireless Earpiece

Disclaimer

Hytera Communications Co., Ltd. (the Company) endeavors to achieve the accuracy and completeness of this manual, but no warranty of accuracy or reliability is given. All the specifications and designs are subject to change without notice due to continuous technology development. No part of this manual may be copied, modified, translated, or distributed in any manner

without the express written permission of us. If you have any suggestions or would like to learn more details, please visit our website at: http://www.hytera.com.

Instructions

- Ensure the distance between the wireless earpiece and the radio is within 10 meters during operation.
- Only use the wireless earpiece if traffic conditions permit safe use and check if local laws and regulations restrict the use of wireless earpiece while driving.
- Do not use the wireless earpiece during lightning storm weather to avoid malfunction.
- Exposure to loud noise from any source for extended periods of time may temporarily or permanently affect your hearing. Use as low a volume as possible and avoid prolonged wearing.

Items in the Package

Please unpack carefully and check that all items listed below are received. If any item is missing or damaged, please contact your dealer.

No.	Name	Qty.
1	Wireless Earpiece	1
2	Earhook	1
3	Rubber Ear Cushion	3
4	Wireless Audio Adapter	1
5	Owner's Manual	1

Function Overview

This exquisite, easy-wearing and lowpowered wireless earpiece is applicable to Hytera portable radios with firmware version of 5.05 and above.


With Hands-free function, you can have convenient and safe communication within a distance of 10 meters from the radio

You can use the wireless earpiece to


communicate regardless whether the radio supports BT feature or not.

Product Overview

Wireless Earpiece

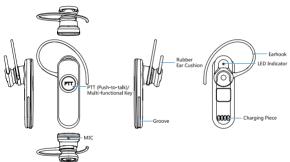

Wireless Audio Adapter

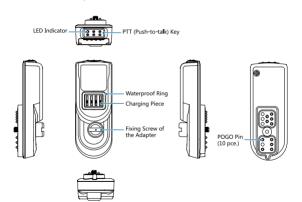

4

Specification

Talk Time	>4 hours
Dust/Water	IP54
Protection	
Class	
Operation	Wireless Earpiece: -20°C to
Temperature	+60°C
	Wireless Audio Adapter:
	-25°C to +65°C
Storage	Wireless Earpiece: -40°C to
Temperature	+75°C
	Wireless Audio Adapter:
	-40°C to +75°C

Charging the Wireless

Earpiece



 To charge the wireless earpiece, simply connect it to the adapter on the radio. It is recommended to use the high-capacity battery specified

- by the Company to ensure the optimal operation duration of the radio.
- Charging the wireless earpiece will not affect the radio operation.
- If the earpiece is idle for a long time, charge it at least once within three months
- If the LED indicator does not glow red while the wireless earpiece is being charged, charge the earpiece for 10 to 20 minutes for it to recover to normal status.

Charge the wireless earpiece before use. The LED indicator of the wireless earpiece glows red during charging and glows blue when the wireless earpiece is fully charged. Also, the LED indicator indicates the pairing and connection status. Please refer to LED Indication for details.

 Connect the wireless audio adapter to the radio and secure the screw to fasten it.



Fix the wireless earpiece into the wireless audio adapter.

Malas august the wireless applies.

Malas august the wireless.

Make sure the wireless earpiece is fully fixed into the adapter.



3. Turn on the radio.

Caution: The wireless earpiece can be charged only when the radio is powered on. Please ensure the radio is powered on when charging the radio (with battery attached) and the wireless earpiece at the same time.

Pairing with and Connecting to the Adapter

Before initial connection, the wireless earpiece needs to be paired with the adapter first. Afterwards, the wireless earpiece can connect to the adapter without pairing.

- Disconnect the wireless earpiece from other devices.
- Connect the wireless earpiece with the radio. (See Charging the Wireless Earpiece for details)
- Turn on the radio, and the wireless earpiece will be powered up.
- The wireless earpiece will be paired with and connected to the adapter automatically.
- Pairing mode: The LED indicator of the wireless earpiece/adapter flashes red and blue alternatively.
- Connection status: The LED indicator flashes blue rapidly after the connection is completed.

Wearing the Wireless Earpiece

Tips: There are three rubber ear cushions with different sizes provided with the wireless earpiece for your comfortable wearing.

Wear the wireless earpiece after the connection is completed. Adjust the rubber ear cushion to position it into your ear canal, and adjust the earhook to secure the earpiece.



Transmitting

After detaching the wireless earpiece from the adapter, you can hold down the PTT key on the wireless earpiece or the PTT key on the adapter to make a call.

Powering On/Off

The wireless earpiece will give ring indication (you can hear it only when you are wearing the wireless earpiece) upon power-on/off.

Powering On

- Automatic power-on: When attached to the radio via the adapter, the wireless earpiece will be powered on automatically when the radio is turned on.
- Manual power-on: When the wireless earpiece is not attached with the adapter, you can power on the wireless earpiece by long pressing the PTT key on it. The adapter can be powered on by turning on the radio only.

The LED indicator flashes after the wireless earpiece is powered on. Please refer to LED Indication for indication details.

Powering Off

To power off the adapter, turn off the radio. To power off the wireless earpiece, long press the PTT key after the BT connection is disconnected (the LED indicator flashes blue slowly). The LED indicator goes out when the wireless earpiece is powered off.

LED Indication

Caution:

 When the wireless earpiece is being charged on the adapter, the LED indicator glows red when charging is in process and glows blue when the wireless earpiece is fully charged. In this case, the following indications are not applicable. You can identify the status of the wireless earpiece via the LED indication of the adapter. You can also detach the wireless earpiece from the adapter to identify the status of the wireless earpiece.

 The following indications do not include the charging indications.

LED Indication	Earpiece Status
The LED indicator flashes red and blue alternatively.	Pairing
The LED Indicator glows red.	Transmitting
The LED indicator	Low battery power
flashes red.	(applicable to wireless earpiece only)
The LED indicator	Connected with no
flashes blue twice rapidly.	voice
The LED indicator	Connected with
flashes blue once rapidly.	voice

The LED indicator flashes blue slowly.

Paired but not connected

Troubleshooting

Phenomena	Analysis	Solution
The LED indicator does not glow red while the wireless earpiece is being charged.	The battery power of the wireless earpiece may run out completely.	Charge the wireless earpiece for 10 to 20 minutes.
The wireless earpiece cannot pair with the adapter.	The wireless earpiece or the adapter may pair with other BT devices.	Move away from other BT devices and restart the radio to pair the wireless earpiece with the adapter.